

# GSM

1		ATE0 ( .)	ATE1
2	/	ATQ1 ( -vpt )	ATQ0 ( )
3	/	ATV0 ( )	ATV1 ( )
4	,	ATX0	ATX0
5	CD	AT&C1	AT&C1 ( )
6	DTR	AT&D0	AT&D2 ( )
7	. S0=0	ATS0=2 ( ) 2	ATS0=0 ( )
8	( )	AT+IPR=9600	AT+IPR=9600
9	,	AT+ICF=3,4 (8,1,no parity)	AT+ICF=3,4 (8,1,no parity)
10		AT+IF =0	AT+IF =0
11	TEXT SMS	AT+CMGF=1	AT+CMGF=1
12	SMS	AT+CNMI=1,1,0,0,1	-
13	11 12	AT+CSAS	AT+CSAS
14	, (NVRAM)	AT&W ( )	AT&W ( )
15	( )	AT&V AT15	AT&V AT15

1. 9600 / ;
2. :

```

AT+IPR=9600 <Enter>
AT X0 <Enter>
AT&C1 <Enter>
AT&D0 <Enter>
AT S0=2 <Enter>
AT+CMGF=1 <Enter>
AT+CNMI=1,1,0,0,1 <Enter>
AT+CSAS <Enter>
AT Q1<Enter>
AT V0<Enter>
AT E0<Enter>

```

Fastrack Extend

3. :
- ```

AT &W<Enter>

```

!!! **ATQ1**